

8. Components



8.0 Exploded Drawings of Delta satellite with Parts List

Delta Satellite (internal parts)

Refer to **Fig. 8.1**

Delta Satellite with
separate disinfection injector

Refer to **Fig. 8.2**

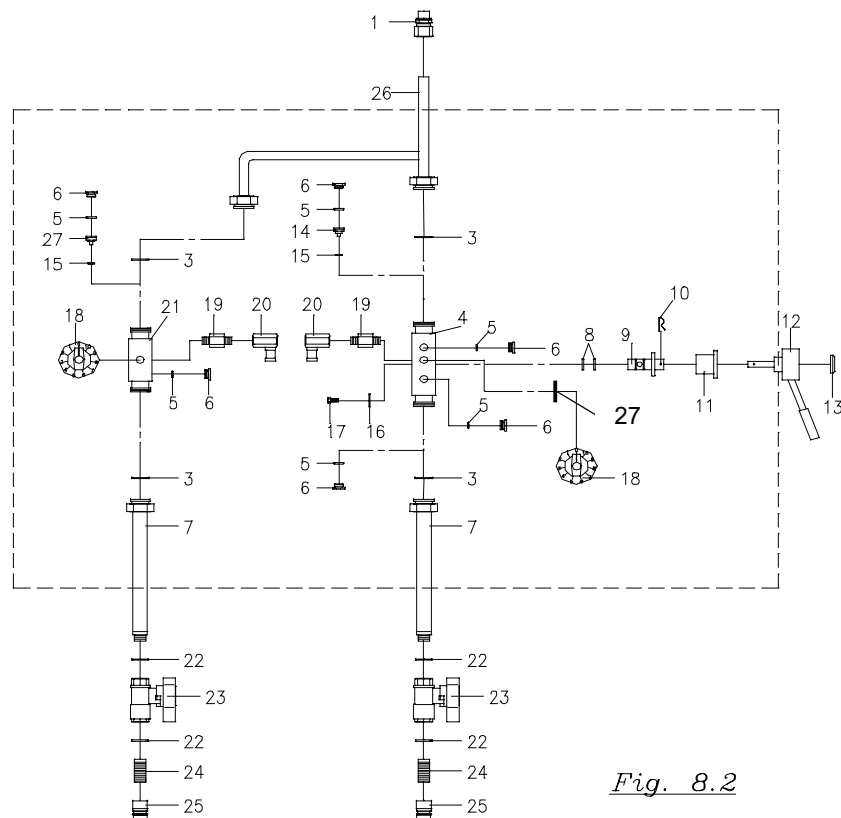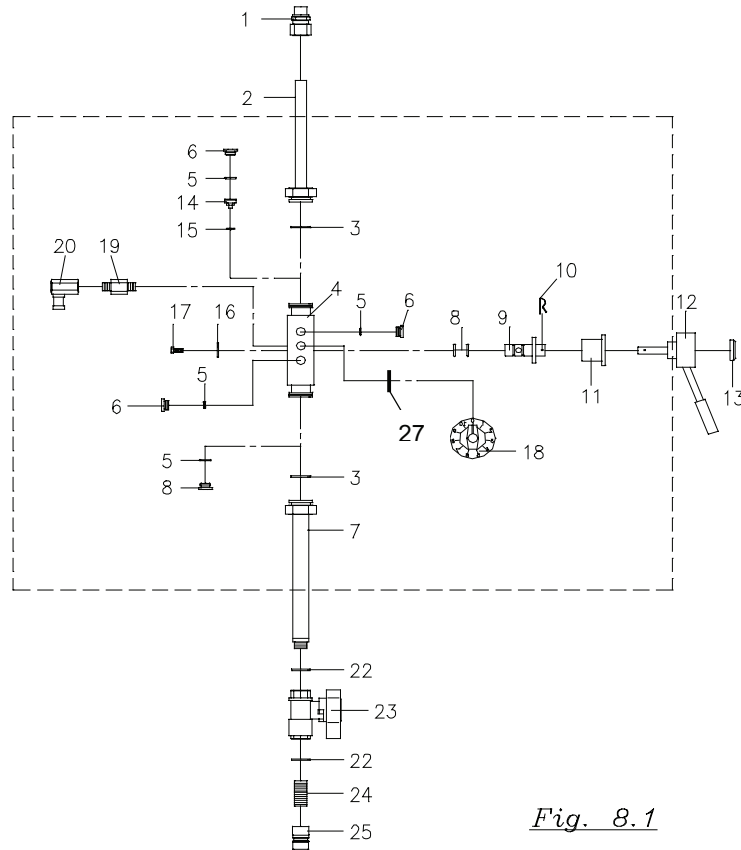

Pos. No.	Article No.	Description	Number
1	336000	Union 15 mm x 3/8"	1
2	0605232	Inlet pipe	1
3	356900	O-ring for union	2(4)
4	359992	Injector block for detergent	1
5	352800	O-ring for Plug	4(6)
6	350002	¼" Plug	4(6)
7	0605297	Outlet pipe	1(2)
8	352800	O-ring for valve spindle	2
9	359994	Valve spindle for detergent injector block	1
10	321500	Cotter pin	1
11	658200	Bush	1
12	0606328	Handle	1
13	658600	Plastic cap for handle	1
14	0605227	Injector nozzle 1.8 mm detergent	1
15	640500	O-ring for nozzle	1(2)
16	0605257	Washer	1
17	156304	Screw	1
18	647804	Dosing valve for detergent/disinfection	1(2)
19	648000	Check valve for detergent/disinfection	1(2)
20	647700	Angle 1/4" x 12.5 mm SS for detergent/disinfection	1(2)
21	359997	Injector block for disinfection	(1)
22	1807908	Washer	2(4)
23	3403264	Closing valve	1(2)
24	605000	Threaded nipple	1(2)
25	1603101	Coupling, Male part	1(2)
26	0605231	Pipe manifold	(1)
27	357901	Injector nozzle 1.4 mm disinfection	(1)
28	0626046	O-ring EPDM	1(2)

NOTE! The bracketed figures state the number of parts fitted in the Delta Satellite with separate sanitising.

Delta Satellite (external parts)

Refer to **Fig. 9**

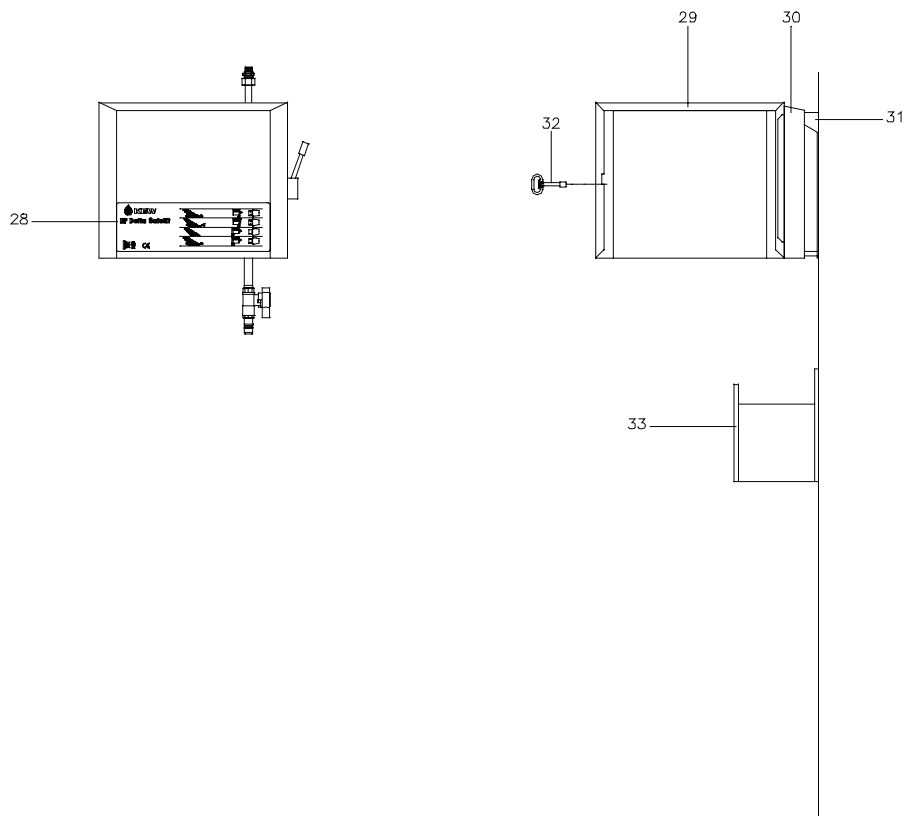


Fig. 9

Pos. No.	Article No.	Description	Number
28	416600	Label for Delta satellite	1
29	364800	Cabinet door for Delta satellite	1
30	364900	Back frame for Delta satellite	1
31	360300	Wall bracket for Delta satellite cabinet	1
32	652000	Key for lock	1
33	652400	Hose holder (option)	1